


## UG-200 ペグ抜きロッド

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、ペグを抜くための道具です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

### セット内容 (各部の名称)

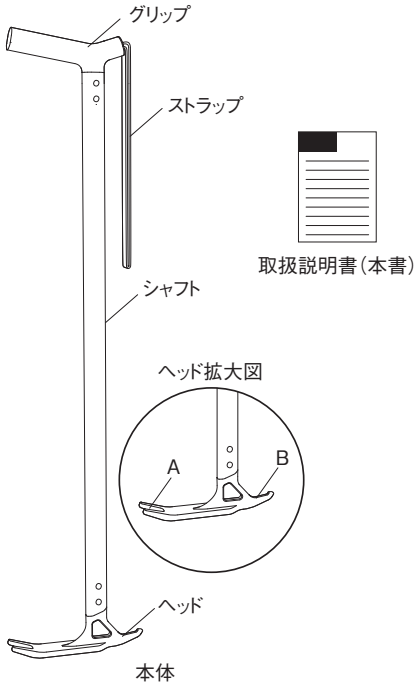

### スペック

- 材質:ヘッド/スチール鍛造(黒色電着塗装)、シャフト/アルミニウム合金(アルマイト加工)、グリップ/アルミダイカスト(粉体塗装)、ストラップ/ナイロン
- サイズ:135×30×735(h)mm
- 重量:700g

**安全上の注意事項** ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

**⚠ 危険** 明らかに生命に関わる重大な事故が予測される行為を示します。

- 振り回したり、他者に向けたりして使用しないでください。重大な事故を招くおそれがあります。

**⚠ 警告** 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。


- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●改造は絶対に行わないでください。機能を損なったり強度が低下したりします。改造製品のアフターサービスはお受けできません。●ペグ抜き用途以外に使用しないでください。重大な事故を招くおそれがあります。●本製品をお子様を使用する際は、必ず大人の管理の下で注意しながらご使用ください。●「使用方法」の項目をよく読み、ストラップを正しく装着している事を確認して使用してください。正しく装着されていない場合、転倒や思わぬ事故を招くおそれがあります。

**⚠ 注意** ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- 本製品に強い負荷をかけないでください。破損や変形につながるおそれがあります。●本製品でモノを叩いたりしないでください。破損や変形につながるおそれがあります。●ヘッド部分に砂やゴミなどがこまごまに注意してください。●商品の特性上、ご使用時や運搬の際にキズがつくと、ヘッド部の金属の素地が露出する場合があります。ご了承ください。●固いもの、とがったもので本製品を擦らないでください。キズや故障の原因となります。●本製品はスノーピーク製のペグ(ソリッドステーク、ソリッドステークデルタ、ジュラルミンペグ)専用です。他社の製品でご使用すると思わぬケガや事故につながるおそれがあります。


### 使用方法

#### ヘッドA側の使用方法①

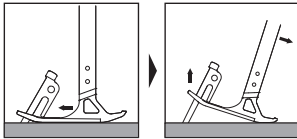


ヘッドAをペグに差し込み、持ち上げることでペグが緩くなりますのでそのまま引き抜いてください。

#### ヘッドA側の使用方法②

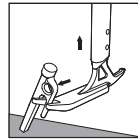


ヘッドAをペグのホール部分や爪などに引っ掛けて抜くこともできます。

#### ヘッドB側の使用方法①

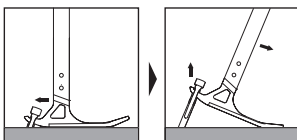


ヘッドBをペグのホール部分や爪などに引っ掛けて引き上げることでペグが緩くなりますのでそのまま引き抜いてください。

#### ヘッドB側の使用方法②

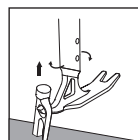

ヘッドBをペグのホール部分や爪などに引っ掛けてこじりながら上へ引き抜くこともできます。

グリップの握り方例(参考にしていただき、ご自身の握りやすい方法でお使いください。)

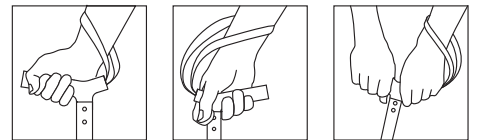

※ご使用の際は、必ずストラップを腕に巻き付けてご使用ください。

### メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●本製品を洗浄する場合は、硬い素材のたわしなどを使用するとキズの原因となります。柔らかい布やスポンジで洗浄してください。●保管をする場合は、直射日光の当たらない、風通しの良く湿気の少ない場所に保管してください。●軽い汚れや水分、油分が付着した場合は速やかに乾いた布で拭き取り、十分に乾燥させてください。●塩分(調味料等)や、その他の薬品が付着した場合は、固く絞った布でよく拭き取り、十分に乾燥させてください。●洗浄する際に塗装部は中性洗剤で洗浄していただき、酸性やアルカリ性の洗浄剤を含んだもので洗浄しないでください。塗装剤がれやシミの原因となります。●サビが発生した際には、ワイヤーブラシなどでサビを落とした後で市販の防錆剤を塗布してください。

### 品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損傷など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

### 修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**  
販売店様または弊社ユーザーサービスまで  
お問い合わせください。  
0120-010-660 (9:00~17:00)  
Email:userservice@snowpeak.co.jp

株式会社スノーピーク  
〒955-0147 新潟県三条市中野原456  
Tel.0256-46-5858 / Fax.0256-46-5860  
www.snowpeak.co.jp

# UG-200 Stake Puller

Thank you for purchasing a Snow Peak product. This product is a tool to pull out the peg. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)	Specifications
<p>Instruction Manual (This Manual)</p>	<ul style="list-style-type: none"> <li>●Material : Head / Steel Forging (Black Electrodeposition Coating), Shaft / Aluminum Alloy (Alumite Processing), Grip / Aluminum Die-cast (Powder Coating), Strap / Nylon</li> <li>●Size : 135×30×735(h)mm / 5.3"×1.2"×29.0"(h)</li> <li>●Weight : 700g / 1.5 lbs</li> </ul>
<b>Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.</b>	
<p><b>⚠ DANGER / Misuse could easily result in a serious accident or death.</b></p> <ul style="list-style-type: none"> <li>●Do not swing it around or point it at others. Doing so may result in a serious accident.</li> </ul>	
<p><b>⚠ WARNING / Misuse could result in serious injury or death.</b></p> <ul style="list-style-type: none"> <li>●Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. ●Do not modify the product in any way. Doing so may result in loss of functionality or deterioration of strength. After-sales service for modified products is not available at Snow Peak Customer Service. ●Do not use this product for any purpose other than peg removal. Doing so may result in a serious accident. ●When this product is used by children, please be sure to use it with care and under the supervision of an adult. ●Please read the "Instructions for Use" section carefully and make sure that the strap is properly attached before use. Failure to do so may result in a fall or unexpected accident.</li> </ul>	
<p><b>⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.</b></p> <ul style="list-style-type: none"> <li>●Do not apply a strong load to this product. Doing so may result in damage or deformation. ●Do not strike objects with this product. Doing so may result in damage or deformation. ●Please be careful not to get sand, dust, etc. caught in the head part. ●If the product is scratched during use or transportation, the metal material of the head may be exposed. Please understand this. ●Do not rub the product with hard or sharp objects. It may cause scratches or malfunctions. ●This product is exclusively for Snow Peak pegs (Solid Stake, Solid Stake Delta, and Duralumin pegs). Use of other companies' products may lead to unexpected injury or accident.</li> </ul>	

### How to use

<p><b>How to Use the Head A Side ①</b></p> <p>Insert head A into the peg and lift it up to loosen the peg. Please pull it out as it is.</p>	<p><b>How to Use the Head A Side ②</b></p> <p>You can also pull out the head A by hooking it on the hole of the peg or the claw.</p>	<p>Examples of how to grip the grip (Please refer to it and use it in a way that is easy for you to grip.)</p> <p>* When using, please make sure to wrap the strap around your arm.</p>
<p><b>How to Use the Head B Side ①</b></p> <p>Pull out the head B as it is because the peg becomes loose by hooking the head B to the hole of the peg or claw.</p>	<p><b>How to Use the Head B Side ②</b></p> <p>It is also possible to pull out the head B upward while hooking it on the hole of the peg or claw.</p>	

### Maintenance

●Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. ●When cleaning the product, do not use a scrubber made of hard material as it may cause scratches. Use a soft cloth or sponge to clean the product. ●When storing the product, store it in a well-ventilated, dry place out of direct sunlight. ●If the product gets dirty, moist or greasy, wipe it off with a dry cloth as soon as possible and dry it thoroughly. ●When salt (seasoning, etc.) or other chemicals adhere to the product, wipe thoroughly with a tightly wrung cloth and dry thoroughly. ●Do not use acidic or alkaline cleaning agents. Doing so may cause the paint to peel or stain. ●When rusting occurs, apply a commercially available rust inhibitor after removing the rust with a wire brush or similar tool.

### Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

### Repair

●If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. ●When you request repairs, please make sure that the product is dry and clean. ●Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. ●Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.